

# The BigEasy™

## Lockout Tool Kit *INSTRUCTIONS*


### *The Big Easy Tool*

1A - (*Plastic Wedge*) - Insert the plastic wedge at the uppermost rear corner of the front door frame. Each vehicle will be a little different but start the wedge into the door gap and use the wedge to pry out the door frame enough to see where the weatherstrip contacts the body. Tapping the wedge with the heel of the hand, carefully guide the wedge between the weatherstrip and body. Continue inserting the wedge until there is enough gap to easily insert the BigEasy Tool.

1B - (*Optional Inflatable Easy Wedge*) - **LUBRICATE THE EASY WEDGE WITH WINDEX OR MILD DETERGENT.** Insert the Inflatable Easy Wedge at the uppermost rear corner of the door frame. The Easy Wedge should be inserted 2/3rds into the car. If obstructed by weatherstrip a plastic or wood wedge may assist. With experience the Easy Wedge will enter most cars without assistance. Inflate the wedge to allow insertion of the BigEasy.

2- Insert the BigEasy Tool into the vehicle interior and use the tip of the Tool to *manipulate the electric lock button, the sliding lock button, or the door opening handle.* If the bend in the BigEasy Tool is not sufficient, remove the Tool and adjust the bend to the required configuration for the vehicle at hand.

*Note: The BigEasy Tool can often be used to tilt the inside rearview mirror to view a lock slide or door handle not directly visible from the working position.*

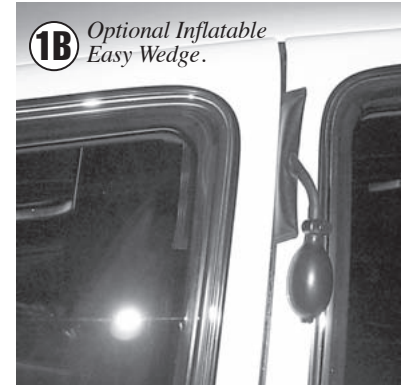

◀ Paint Protector reduces friction between the car door and the BigEasy so the powder coating on the BigEasy does not rub off.

### *SureGrip Lock Knob Lifter*

1- Insert the plastic wedge or optional Inflatable Easy Wedge into the uppermost rear corner of the front door frame just enough to relieve the pressure between the weatherstrip and body.

2- Insert the SureGrip strip into the interior of the vehicle and slide it down to the vertical lock knob. Hold one leg of the SureGrip strip with each hand. Push and pull opposite legs to "steer" the SureGrip as you lower it onto the vertical lock knob.

3- After the SureGrip strip is positioned on the vertical lock knob, pull rearward until snug to grip the knob and then add a slight upward pull to lift the vertical lock knob.





See a video of the BigEasy™ in use at [www.steckmfg.com](http://www.steckmfg.com)

Additional Instructions  
Traducción al Español  
Optional Accessories

On  
Reverse  
Side

# The BigEasy™ Loop

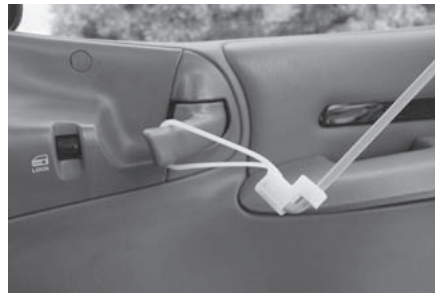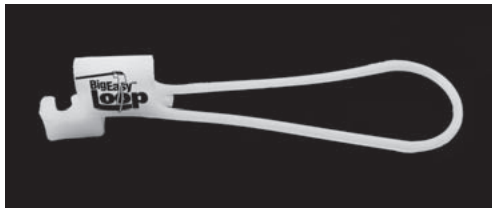

The BigEasy Loop snaps on to any BigEasy Lockout Tool to provide easy leverage to pull door handles and window cranks during the door unlocking process. Handy accessory tool easily snaps on the end of the BigEasy Tool avoiding need to purchase additional and more costly specialty tools. The BigEasy Loop is made from high density poly ethylene which provides a strong but flexible tool to adapt to any angle required to complete the unlocking process. Mold injected with reflective substances which will "Glo" after absorbing sun light for use with tinted windows and headlights for night time lockouts.

## Optional accessories for your BigEasy™

### BigEasy Extend

The BigEasy Extend snaps on to any BigEasy Lockout Tool to provide and extra 12 inches of length to reach emergency floor release handles, keys in ignition and opposite side door handles. Can be used with the BigEasy loop if additional length is required. Glows in the dark!




### BigEasy NightLight

Suction cup LED light illuminates dark car interiors.

### LittleEasy


When the BigEasy is just too long. Works on Japanese imports and some pickup trucks.

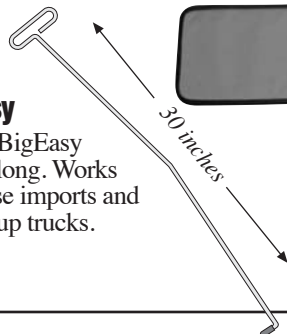

### BigEasy™

### BigEasy Carrying Case

Carry your BigEasy kit in style. Convenient pockets to store all your unlocking tools.

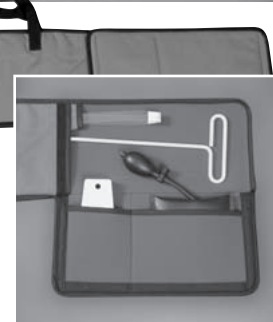

## Bloqueo Tool Kit Instrucciones

### The Big Easy Tool

(Ver photos en reverso)

- 1A - Inserte la caña de plástico en la esquina trasera superior del armazón de la puerta principal. Cada vehículo será un poco distinto; sin embargo comience la inserción de la caña en el hueco de la puerta y utilice la caña como palanca para levantar el armazón de la puerta- lo suficiente para alcanzar a ver dónde se haga contacto los burletes con el cuerpo. Al pulsar la caña con la palma de la mano, guíe la caña cuidadosamente entre el burlete y el cuerpo. Siga insertando la caña hasta que haya un hueco suficientemente grande para fácilmente insertar la herramienta BigEasy Tool.
- 1B - (Optional Inflatable Easy Wedge) - LUBRICATE THE EASY WEDGE WITH WINDEX OR MILD DETERGENT. Inserte la caña Easy Wedge Inflable en la esquina superior más trasera en el armazón de la puerta. La caña Easy Wedge debe insertarse hasta dos terceras partes (2/3) en el carrito. Si ésta está obstruida por el burlete, la palanca de plástico puede ser de ayuda. Con experiencia, la Easy Wedge entrará fácilmente en la mayoría de los coches sin ninguna ayuda. Infle la palanca para permitir la inserción de la caña Big Easy.
- 2 - Inserte la herramienta BigEasy Tool en el interior del vehículo y use la punta de la herramienta para *manipular el botón eléctrico de seguridad, el botón deslizante de seguridad o el mango de apertura de la puerta*. Si la herramienta BigEasy Tool no da abasto, quite la herramienta y ajuste la dobladura hasta lograr la configuración requerida para el vehículo en cuestión.

**Nota:** La herramienta The BigEasy Tool puede ser usada a menudo para inclinar el espejo retrovisor para examinar un pasador de seguridad o mango de puerta que no sea directamente visible desde el sitio de trabajo.

### El Protector de pintura

El Protector de pintura disminuye la fricción entre la puerta del carro y la caña Big Easy para que la capa de polvo no se quite por el roce.

### Levantador de perilla de seguridad SureGrip Lock Knob Lifter

1. Inserte la caña de plástico en la esquina trasera superior del armazón de la puerta principal, justo lo suficiente para aliviar la presión entre el burlete y el cuerpo.
2. Inserte la tira SureGrip en el interior del vehículo y deslícela hacia topar con la perilla de seguridad vertical. Sostenga una pata de la tira SureGrip con cada mano. Empuje y jale las patas opuestas para "conducir" la tira SureGrip, mientras usted la baje sobre la perilla de seguridad vertical.
3. Después de que la tira SureGrip esté colocada sobre la perilla de seguridad vertical, júlela hacia atrás hasta que esté bien apretada para agarrar la perilla y luego júlela hacia arriba para levantar la perilla de seguridad vertical.